

will preserve the value of your  
ational capability.  
to make warranty claims.

include all associated work  
adjustments, readjustments,

replacement or overhaul of com-

### **Intermediate maintenance at 20,000, 60,000, 100,000, 140,000 mls etc.**

If the mileage for scheduled maintenance is not reached, intermediate maintenance must be performed after 2, 6, 10 ... years at the latest.

Diagnosis system: Read out fault memory, reset maintenance interval

Underside of vehicle and engine compartment: Visual inspection for leaks (oils and fluids) and chafing (lines and hoses)

Underbody covers: Visual inspection for completeness, fastening and signs of damage

Coolant hoses: Check condition

Radiators and air intakes: Visual inspection for exterior soiling and blockage

Coolant: Check level and antifreeze

Particle filter: Replace filter element

Brake system: Visual inspection of the brake pads and brake discs for signs of wear (without removal of the wheels)

Brake hoses and lines: Visual inspection for damage, correct routing and corrosion

Drive shafts: Visual inspection of the boots for leaks and signs of damage

Tires: Check condition and tire pressure

Door locks, lid locks, safety hook and internal trunk release mechanism (trunk entrapment) of the front lid:

Check to ensure that they are adjusted correctly and function properly

Vehicle lighting system: Check function

All headlights: Check adjustment

Horn: Check function

Windshield wiper/washer system, headlight washer: Check fluid level and nozzle adjustments, make sure to check window cleaner or antifreeze, depending on time of year; check wiper blades

Electrical devices as well as indicator and warning lights: Check function

Battery: Check functional status and fluid level

\* The engine oil and oil filter must be changed every 6,000 mls in vehicles that are driven in countries where leaded fuel is used.